


ProKnee[®]


MADE IN USA

CUSTOM MADE CUSTOM FIT KNEEPADS


Replacing the Model 0714[®] and Model 0714E[®] Cushion Insert

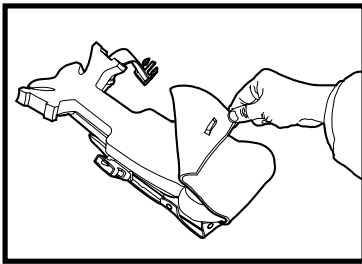


1. Remove liner.

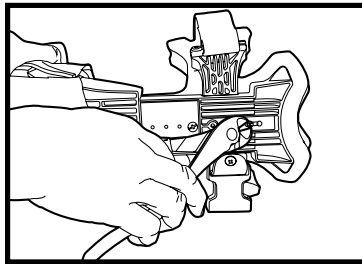


2. Carefully clip ties.

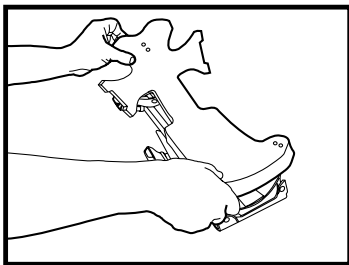


3. Remove old Cushion Insert and replace new Cushion Insert by lining up to tie holes.

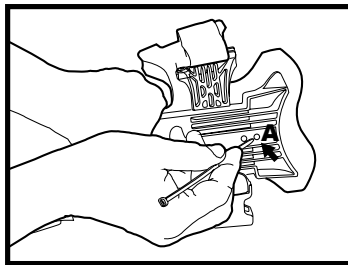


4. Insert tie into hole "A" as shown.

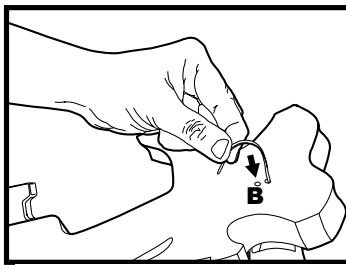


5. Guide tie end down thru Hole "B".

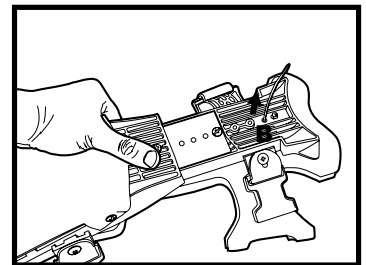


6. Up thru "B" on front of frame.

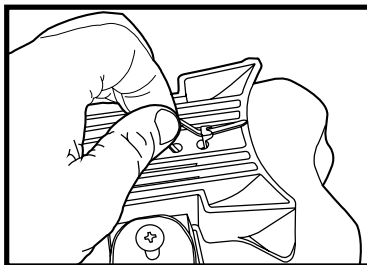


7. Thread tie end thru tie head.

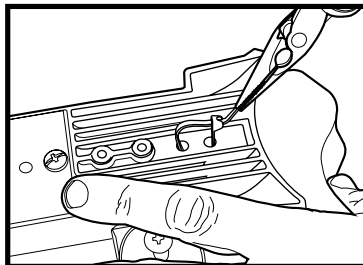


8. Tighten with needle nose pliers.

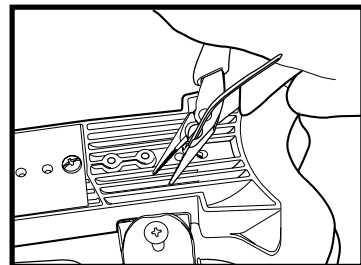


9. Clip off excess tie.

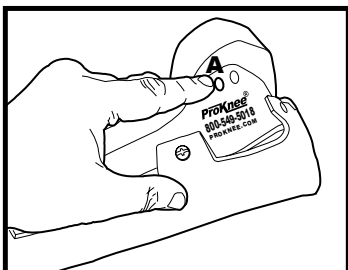


10. Insert tie into hole "A" as shown.

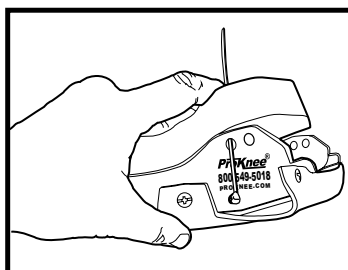

10A.

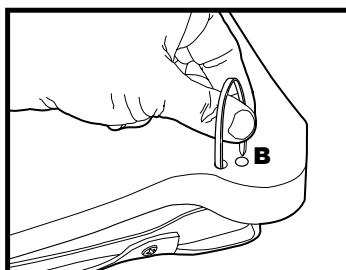

11. Guide tie end down thru hole "B".

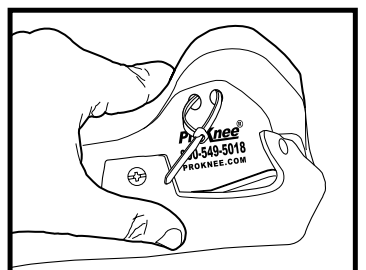

12. Thread tie end thru tie head, tighten and clip as shown in steps 8 and 9. Repeat steps 10 thru 12 on opposite side.