



REPLACING THE AP16® TUCKED IN NO WRINKLE LINER


1 Remove Rubber Boot by unscrewing the 6 screws shown in Figure A. Remove old liner.

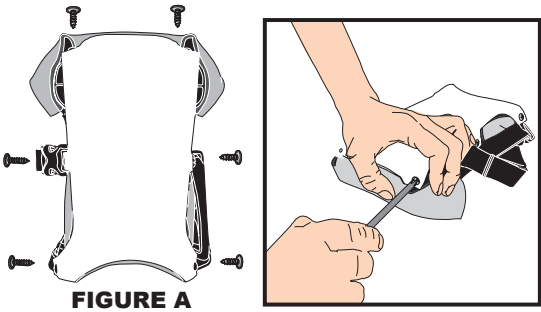


2 Lay new liner down black side up. Center frame as **FIGURE B** (Cushion side down/ **Hook Strip** side up) so that **Buckle Mounts & Strap Mounts** align with **Middle Slots & Bottom Slots**.

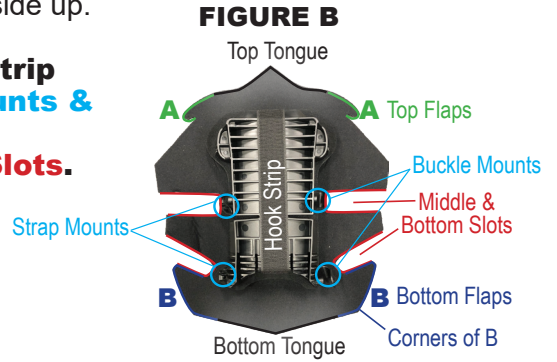

3 Attach the **4 flaps** of liner to the **Hook Strip** at the center of the frame. Tuck liner underneath straps (if needed).

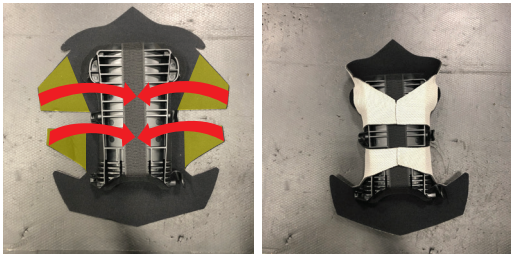

4a Tuck **Top Flaps A** between top of frame & Cushion Insert.

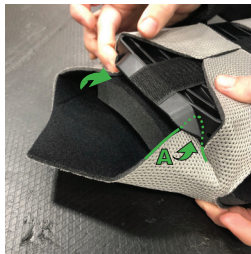

4b Push liner down over width of Cushion Insert.




4c Tightly fold **Top Tongue** of liner to the top of **Hook Strip** at the center of the frame.




5a Tuck **Bottom Flaps B** between bottom of frame & Cushion Insert.





5b Position **Corners of B** with edge of Cushion Insert (frame-side).

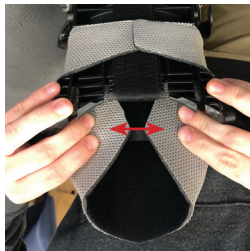

5c Push liner down over width of Cushion Insert.

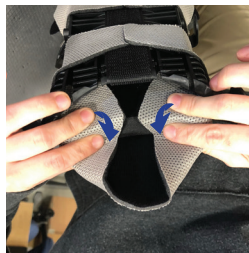

5d Tightly fold **Bottom Tongue** of liner to the bottom of **Hook Strip** at the center of the frame.

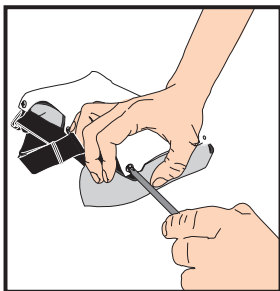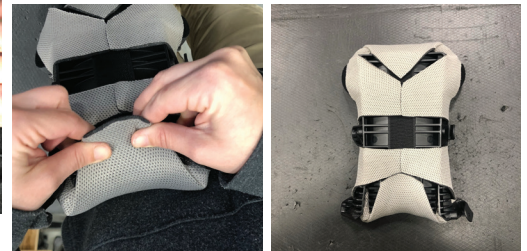

6 Reattach Rubber Boot with screws.

AP16®
ALL PURPOSE KNEEPADS
WORLDWIDE PATENTS PENDING



SINCE 1989
ProKnee®
MADE IN USA

 @PROKNEE
  @PROKNEE.TREADMAN
  PROKNEE.COM
  @MR.PROKNEE
  @PROKNEE CORP

ProKnee® PRO KNEE AP16 SMART LOCK® are Registered Trademarks of PROKNEE® CORP. U.S. Pat.# 4772071, 4876745, 7937769, 10441007 Other Patents Pending CANADA Pat.# 2617789, 2895405 EUROPEAN Pat.# 2941136